



## 600182 – EZ Saddle Bar

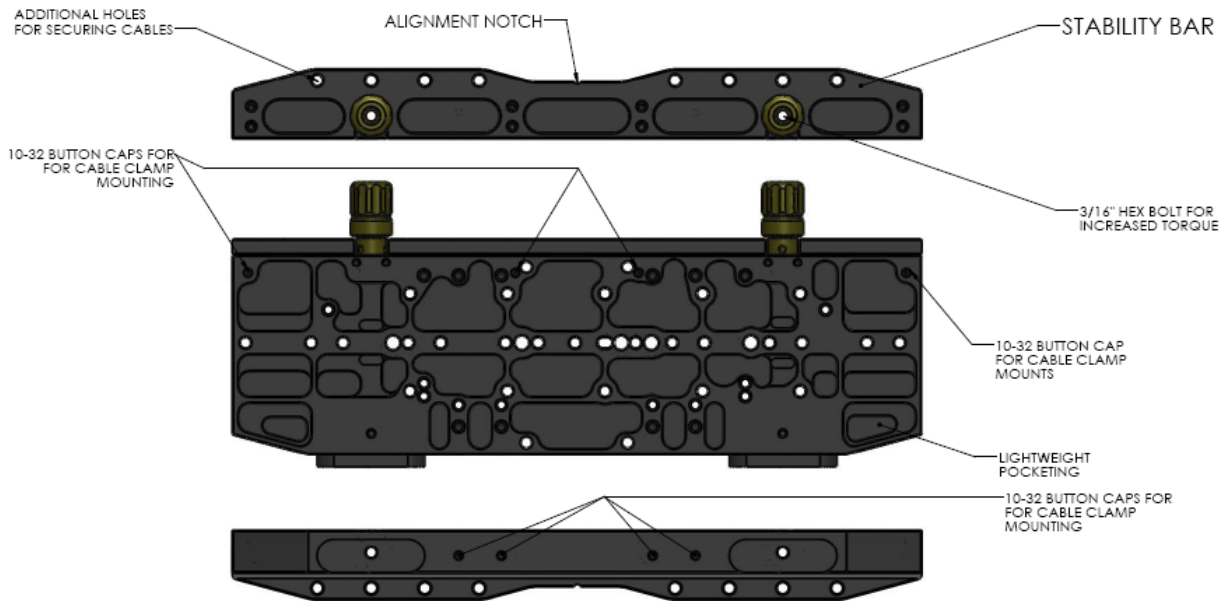

### Adjusting the Stability Bar

The EZ Saddle has a Stability bar designed to allow you to rest one edge of your telescope's dovetail and simply tilt the other edge into the clamp. However in order for the spacing to be correct, the Stability bar may need to be reversed from its current position.

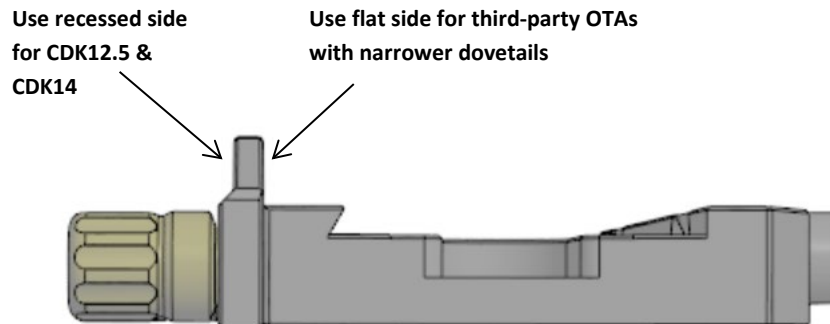

### To Reverse the Stability bar:

Remove the eight button head screws that attach the stability bar to the EZ Saddle. The stability bar will lift over the locking knobs without needing to remove them.

Reverse the stability bar so that the desired side is facing towards the inside of the clamp and reattach with the same button head screws.

### Adding Cable Management Cleats

The EZ Saddle comes with two cable management cleats that can be attached to the clamping side of the saddle plate.

Each cleat has slots on the sides that allows for a cable tie to secure your telescope cables

